

### 【Warranty and instructions】

- 1,From the date of purchase , the manufacturer provides free replacement in one year and 3 years warranty,.The warranty start date will be subject to the effective purchase date of the product from our factory.
- 2,As a electronic product, Without authorization of maintenance man, you shouldn't open the cover , or you can't get the related after sales service .
- 3,Be affected with lighting,damp and artificial , the factory may charge additional fees in the case of a notice .
- 4,The factory guaranty of the product by virtue of warranty card , If meet quality problem,you should fill in customer information and product problem description carefully , or you can't get proper aftersales service.
- 5,In addition to the machine accessories(power adapter, support bracket , package , etc) don't apply in this rules.
- 6,The factory has the right to the interpretation of the statement

# Product Warranty Card

Product model : \_\_\_\_\_ Date of purchase : \_\_\_\_\_

Customer Name : \_\_\_\_\_ Product service hotline: \_\_\_\_\_

 
Date of inspection qualified: \_\_\_\_\_ Quality inspector: \_\_\_\_\_

Customer feedback product's problems:

Maintenance results (filled by maintenance man)

Maintenance NO. \_\_\_\_\_

# User manual

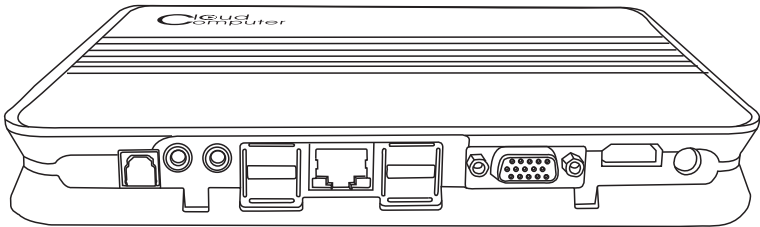

## 【Notice】

Thank you for purchasing cloud computer.

In order to easily use this equipment, please read the manual before using.

The product version may upgrade in ceaseless, this document is used only as a guide. All of these documents, representations, informations and advices does not constitute any express or implied warranty. The instruction of the material are subject to change without notice, and don't take any responsibility that manual errors generated or omissions caused.

 
## 【Precautions】

- In order to assure the safety, please select the power adapter appointed or provided by our factory
- In the boot state, please do not directly pulled out power adapter, or it may off power suddenly.
- Please do not move the equipment when it is running.
- Keep far away from high temperature or low temperature environment, try to keep moistureproof and ventilated working environment.
- Please do not hurl, knock or rock the machine, the non-professional workers do not unpack the box without any guides.
- Do not clean the machine with harsh chemical or corrosive cleaner.

## Catalogue


1.Component.....	01
2.Connection.....	02
2.1 Connect with Monitor.....	02
2.2 Connect with Lan Cable.....	02
2.3 Connect with Mouse&Keyboard.....	02
2.4 Connect with Mic&Speaker.....	02
2.5 Connect with Power .....	02
3.Product Parameter .....	03
3.1Master Control.....	03
3.1.1Display.....	03
3.1.2Memory.....	03
3.1.3Ethernet.....	03
3.2Appearance.....	03
3.1 I/Oport.....	04
3.1.1Power and Working environment.....	04
4.Faults and maintenance .....	05

## 1 Spare Parts description

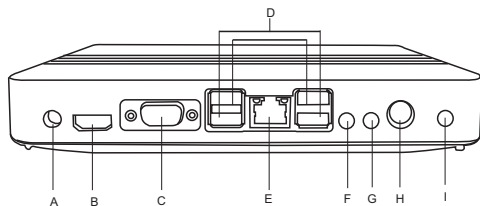


### Back Panel

 - |                    |                        |                  |
|--------------------|------------------------|------------------|
| A. power interface | B. HDMI interface      | C. VGA interface |
| D.4 USB            | E. LAN port            | F. Microphone    |
| G. Speaker         | H. PS/2 mouse keyboard | I. Switch        |

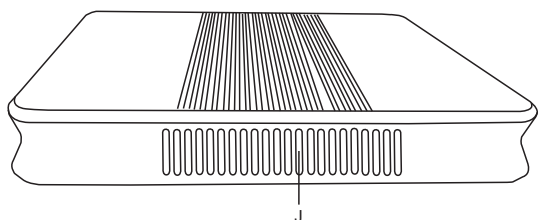

### Side Panel

 J :ventilation and heat dissipation

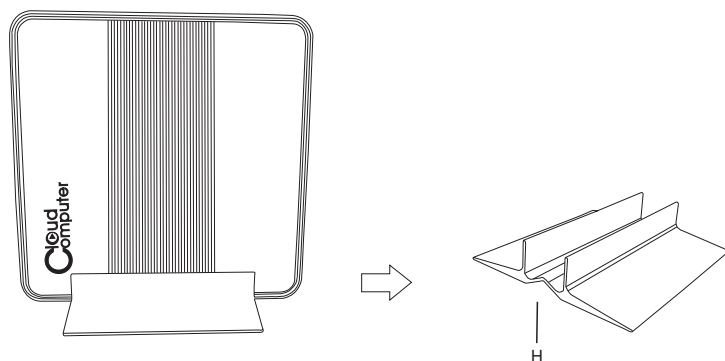

### Base (Extra charge)

H:Base

## 2 How to connect

### 2.1 connect monitor

Use monitor signal line access to VGA interface of Mini PC .  
With hd monitor ,for example, high-definition TV, put signal line access to the HDMI port on Mini PC , then can support double screen.

### 2.2 Connect the network cable

Put ordinary network cable access LAN port on Mini PC and the other end connect to the network switch router port.

### 2.3 Connect mouse and Keyboard

put the mouse and keyboard USB cable access to Mini PC USB 2.0 port

### 2.4Connect headset and microphone

Put headset access to Mini PC SPK port

Put Microphone connect to Mini PC MIC port

Description: Headset port identified as green, microphone ports identified as red.

 
### 2.5 connect power supply

Plug in power adapter, power indicator light shows green


### 3 Product Description

Processor	
Operating system	Windows、Linux
Display	
Resolution	1920*1200 32 bits 60Hz
storage	
RAM	DDRIII 2GB(1GB-4GB optional)
Storage	SATA DOM 8GB(4GB-1TGB optional)
Sound card	HD Multichannel Sound Card
Network	
Ethernet	10/100/1000Mbps (adjust itself)
Wireless network	802.11.b/g/n(optional)
Appearance	
Dimension	200*200*40MM
Weight	Less than 1.0 KG
I/O port	
Display port	VGA+HDMI
USB2.0	4
Ethernet port	Rj45 Lan port
Power input interface	1 inner diameter 2.5mm,external diameter 5.5mm
audio	Standard 3.5 Audio input and output
Consumption and working environment	
Input	AC 100-240V AC/50-60Hz
Output	DC 12V/3A
Type	External power adapter
Consumption	Less than 17W
Noise	Zero
Temperature	Vertical 0-40℃
Humidity	10%-85%

### 4 Back hanging installation instructions

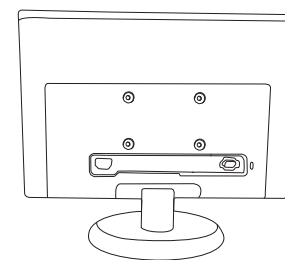


Computer

 

Bracket

 
**First stage:**Screw the bracket to a computer

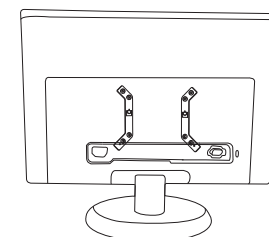

**Bracket installation is completed**




 front side

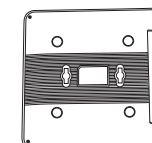

back side

 
**Second stage:**put the back side of the product groove aim to the bracket, top-down to the installed bracket

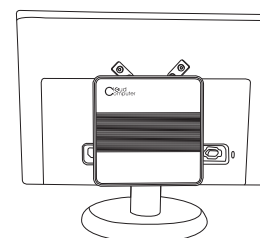

The preliminary product installation drawing



 buttons

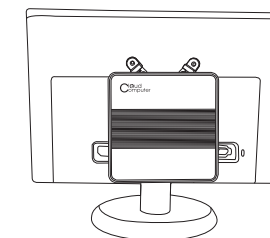

Back hanging installation diagram

**The third stage:**Install buttons to secure device

**The fourth stage :**back hanging installation completed